 


BARRACUDA

Analog Flanger

Quick Start Settings

Note - settings are approximate.
Additional adjustment may be necessary.



 
Level Depth Regen Rate

Barracuda




Level Depth Regen Rate

Liquid Flange




Level Depth Regen Rate

Tape Flange

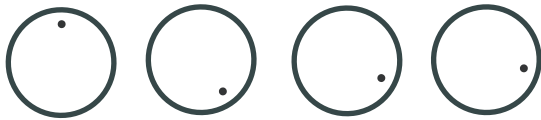


Level Depth Regen Rate


Rocket Ride

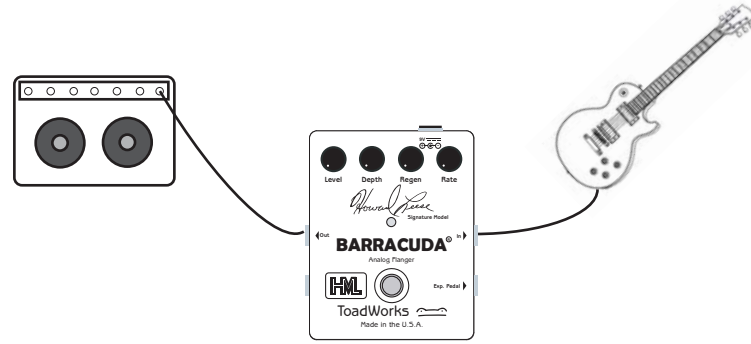

Mono Mode

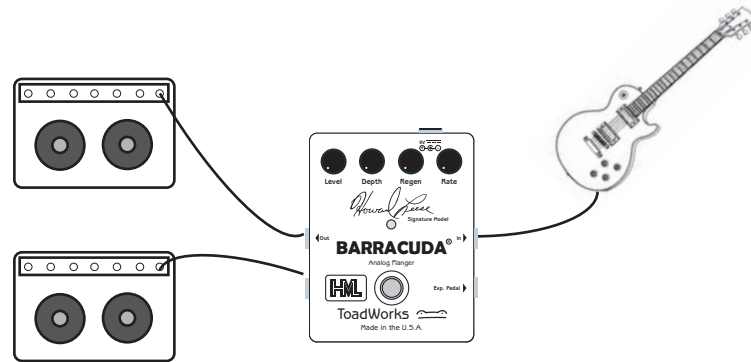

Stereo Mode

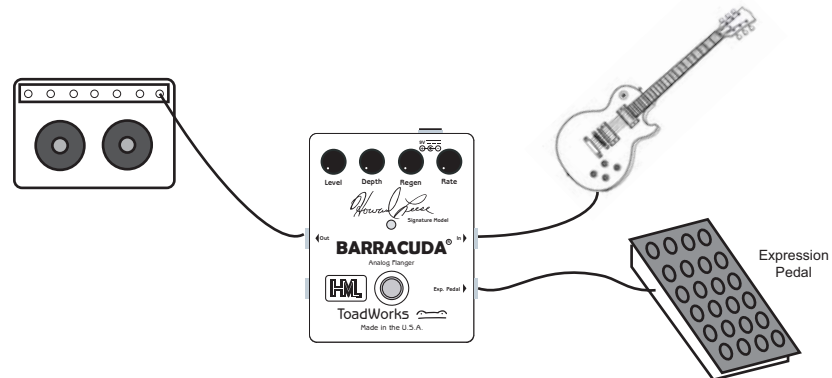

Manual Mode