


BARRACUDA®

Analog Flanger


Quick Start Settings

*Note - settings are approximate.
Additional adjustment may be necessary.*

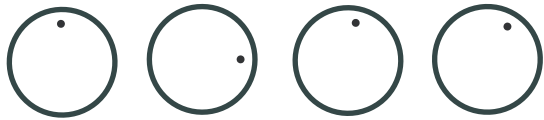


Level Depth Regen Rate

Barracuda

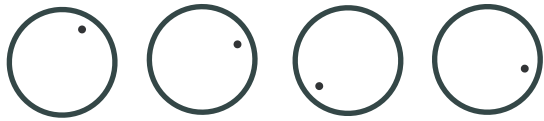

Level Depth Regen Rate

 Liquid Flange



Level Depth Regen Rate

Tape Flange




Level Depth Regen Rate


Rocket Ride



Mono Mode

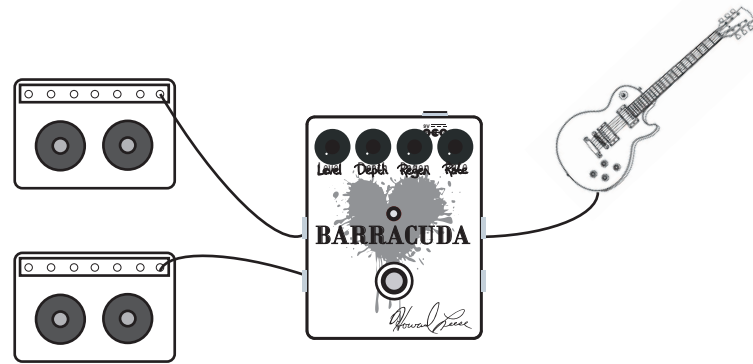

Stereo Mode

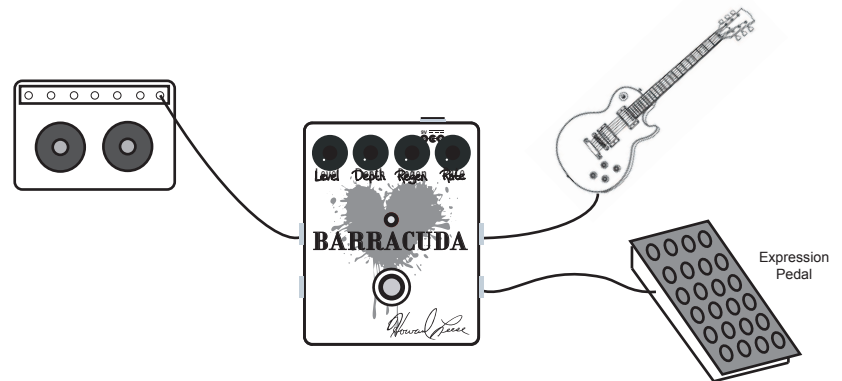

Manual Mode